



Firma: G Store & Repair doo

Adresa: Bul.Mihajla Pupina 10z/3

Telefon: 011 785 66 66

Fax:

PIB: 112029009

E-mail: office@gstore.rs

Punjac za laptop Acer 19V 3.42A (5.5*1.7)

Šifra: 73279
Kategorija proizvoda: Punjači za Acer
Proizvođač: Acer



Cena: 2.212 rsd.

Odgovara sledećim modelima punjača:

177626-001, 180676-001, 198713-001, 222113-001, 25.10064.04, 25.10064.041, 25.10068.801, 25.10110.171, 261867-001, 91.41Q28.002, 91.41Q28.003, 91.42S28.002, 91.48R28.003, ac2, ADP-65DB, ADP-65JH DB, ADP-65VH B, adp65db, ADT-W61, AP.06501, AP.06501.005, AP.06501.006, AP.06501.014, AP.06503.003, AP.06503.006, AP.06503.008, AP.06503.010, AP.06503.011, AP.06503.013, AP.06503.006, AP.T2101.001, AP.T3503.001, AP.T3503.002, AP.06503.003, HAP.0060.001, HP-A0652R3B, LC-T2801-006, LC. ADT01.006, LC.ADT01.001, LC.ADT01.003, P.T3503.001, PA-1500-02, PA-1600-02, PA-1650-86, PA-1650-02, PA-1650-22, PA-1650-69, PA-1700-02, PA1650 02, SADP-65KB B, SADP-65KB D, SDAP-65KB, PA-1600-02,

Odgovara sledećim modelima laptopova:

Acer AP.06501.005, Acer AP.0650A.001, Acer AP.0650A.005, Acer AP.A1401.001, Acer AP.T1902.001, Acer API2AD02, Acer Aspire 1400, Acer Aspire 1410 Series, Acer Aspire 1500, Acer Aspire 1551, Acer Aspire 1640, Acer Aspire 1650, Acer Aspire 1680, Acer Aspire 1690, Acer Aspire 1830 TimelineX Series, Acer Aspire 2000, Acer Aspire 2020, Acer Aspire 2420, Acer Aspire 2920, Acer Aspire 3000, Acer Aspire 3030, Acer Aspire 3050, Acer Aspire 3100, Acer Aspire 3200, Acer Aspire 3500, Acer Aspire 3510, Acer Aspire 3600, Acer Aspire 3610, Acer Aspire 3620, Acer Aspire 3630, Acer Aspire 3640, Acer Aspire 3650, Acer Aspire 3660, Acer Aspire 3670, Acer Aspire 3680, Acer Aspire 3810 Timeline Series, Acer Aspire 3820 TimelineX Series, Acer Aspire 3935, Acer Aspire 4220 Series, Acer Aspire 4310, Acer Aspire 4315, Acer Aspire 4320, Acer Aspire 4330, Acer Aspire 4520 Series, Acer Aspire 4530, Acer Aspire 4535 Series, Acer Aspire 4540 Series, Acer Aspire 4551, Acer Aspire 4710 Series, Acer Aspire 4715, Acer Aspire 4720 Series, Acer Aspire 4730 Series, Acer Aspire 4730Z Series, Acer Aspire 4736Z, Acer Aspire 4810 Timeline Series, Acer Aspire 4810 TimelineX Series, Acer Aspire 4920 Series, Acer Aspire 5000, Acer Aspire 5030, Acer Aspire 5050, Acer Aspire 5100, Acer Aspire 5310 Series, Acer Aspire 5315, Acer Aspire 5330, Acer Aspire 5334, Acer Aspire 5500, Acer Aspire 5510, Acer Aspire 5515, Acer Aspire 5516, Acer Aspire 5517, Acer Aspire 5520 Series, Acer Aspire 5530 Series, Acer Aspire 5532, Acer Aspire 5534, Acer Aspire 5535, Acer Aspire 5536 Series, Acer Aspire 5538, Acer Aspire 5542 Series, Acer Aspire 5551 Series, Acer Aspire 5570, Acer Aspire 5580, Acer Aspire 5600, Acer Aspire 5680 Series, Acer Aspire 5710 Series, Acer Aspire 5720 Series, Acer Aspire 5730 Series, Acer Aspire 5732, Acer Aspire 5732Z, Acer Aspire 5734, Acer Aspire 5735, Acer Aspire 5738 Series, Acer Aspire 5740 Series, Acer Aspire 5741 Series, Acer Aspire 5745 Series, Acer Aspire 5810 Timeline series, Acer Aspire 5820 TimelineX series, Acer Aspire 5920 Series, Acer Aspire 6530 Series, Acer Aspire 6920 Series, Acer Aspire 6930 Series, Acer Aspire 6935 Series, Acer Aspire 7100, Acer Aspire 7540 Series, Acer Aspire 7551 Series, Acer Aspire 7730 Series, Acer Aspire 7735 Series, Acer Aspire 7736, Acer Aspire 7736Z, Acer Aspire 7740 Series, Acer Aspire 7741 Series, Acer Aspire 7745 Series, Acer Aspire 9100, Acer Aspire 9400, Acer Extensa 4220, Acer Extensa 4230, Acer Extensa 4420, Acer Extensa 4620, Acer Extensa 4630, Acer Extensa 5220 Series, Acer Extensa 5230E, Acer Extensa 5420 Series, Acer Extensa 5430, Acer Extensa 5620 series, Acer Extensa 5630 Series, Acer Extensa 5635, Acer Extensa 5635Z, Acer Ferrari 1000, Acer HP-OK066B13, Acer LC.ADT01.007, Acer LC.T2801.006, Acer PA-1650-02, Acer PA-1700-02, Acer SADP-65KB, Acer TravelMate 3000 Series, Acer TravelMate 3010 Series, Acer TravelMate 3020 Series, Acer TravelMate 3030 Series, Acer TravelMate 3040 Series, Acer TravelMate 3200 Series, Acer TravelMate 3210 Series, Acer TravelMate 3220 Series, Acer TravelMate 3230 Series, Acer TravelMate 3250 Series, Acer TravelMate 3260 Series, Acer TravelMate 5520 Series, Acer Travelmate 2000 Series, Acer Travelmate 220 Series, Acer Travelmate 230 Series, Acer Travelmate 2300 Series, Acer Travelmate 2310 Series, Acer Travelmate 2410 Series, Acer Travelmate 2450 Series, Acer Travelmate 2460 Series, Acer Travelmate 2470 Series, Acer Travelmate 2480 Series, Acer Travelmate 250 Series, Acer Travelmate 270 Series, Acer Travelmate 290 Series, Acer Travelmate 3270 Series, Acer Travelmate 420 Series, Acer Travelmate 4730 Series, Acer Travelmate 4740 Series, Acer Travelmate 500 Series, Acer Travelmate 510 Series, Acer Travelmate 5530 Series, Acer Travelmate 5600 Series, Acer Travelmate 5710 Series, Acer Travelmate 5720 Series, Acer Travelmate 5730 Series, Acer Travelmate 5740 Series, Acer Travelmate 6000 Series, Acer Travelmate 6231 Series, Acer Travelmate 6291 Series, Acer Travelmate 6292 Series, Acer Travelmate 6293 Series, Acer Travelmate 630 Series, Acer Travelmate 6492 Series, Acer Travelmate 6493 Series, Acer Travelmate 650 Series, Acer Travelmate 6592 Series, Acer Travelmate 6593 Series, Acer